

AUWFOB Standard Remote Control

User Guide

Specifications

Туре	Microprocessor based wireless remote control key
Housing	ABS
LED	Transmission indication
Power Supply	3V DC (1x CR2032 Lithium Coin size Battery)
Battery Life	Approximate Up to 12 months
Coverage Range	Up to 50 meters (open air with direct line of sight)
Dimension	Approx. 61mm x 37mm x 13.5mm

Remote Control Function Keys

DISARM	Press once to disarm the system
FULL ARM	Press once to arm the system
PARTIAL ARM	Press to partial arm the system with partial arm (For selected system only)
FULL ARM + PARTIAL ARM	Press both buttons at the same time to activate the panic Alarm.

Remove Tag when Programming



If the AUWFOB wireless remote control key comes with a system kit, it has been pre-programmed and is not necessary to program it. You could remove the battery protection tag -

Replace or Reinstall Battery

- i. Remove back cover screw and back cover.
- ii. Replace or reinstall the CR2032 Lithium coin size Battery from its holder in the correct polarity as shown.
- iii. Replace back cover and tighten the screw.



Programming AUWFOB Remote Control Keys into wireless system

- i. Press Learn button on APFES/APFW10 board, it gives two beeps, then yellow LED is on to indicate learn mode now after release off.
- ii. Under learn mode, press any key on unregistered wireless remote key, Red LED on APFES/APFW10 will flash fast twice and give two beeps to indicate OK.

HEALTH WARNING:

The Remote Control unit is fitted with a Coin Cell (CR2032) battery. When removing this cell, do not place in your mouth as this could impair your health. Also please ensure young children are kept out of reach from this battery to prevent them from swallowing it and choking.

Distributed by;

Challenger Security Products 4 Arkwright Court, Fylde Industrial Estate Blackpool FY4 5DR

Tel: 01253 792898 Fax: 01253 791887 Email: <u>Enquiries.challenger@adivision.co.uk</u> Web: <u>www.challenger.co.uk</u>